

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.

# Westward® High Lift Vehicle Stands

## Description

Westward High Lift Vehicle Stands are designed to support rated capacity loads over extended periods. Heavy gauge steel frame helps prevent distortion and twisting. These high lift vehicle stands are designed to meet applicable ANSI/PALD Standards.

Note: Rated Capacity is Per Pair ONLY! Use ONLY one pair per vehicle.

## Specifications

Model	Capacity	Base Size	Min. Height	Max. Height
4GU80A	10 Ton	16" x 16"	28-1/4"	47"

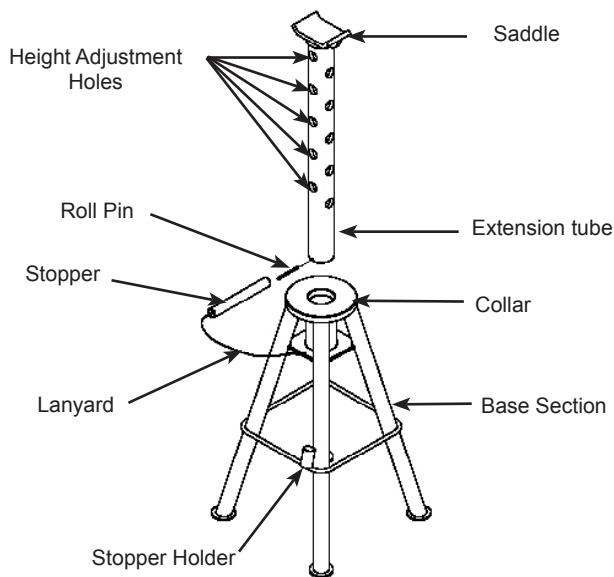


Figure 1- High Lift Vehicle Stand Components

## General Safety Information

**▲ WARNING** Study, understand, and follow all instructions before operating this device. Rated capacity is per pair! Do not exceed rated capacity. Use only on hard level surface. Center load on saddle. Use as a matched pair to support one end of a vehicle only. Use only one pair per vehicle. Stands are not to be used to simultaneously support both ends or one side of a vehicle. No alterations shall be made to this product. Failure to heed these markings may result in personal injury and/or property damage.

## Before Use

1. Before using this product, read the operator's manual completely and familiarize yourself thoroughly with the product and hazards associated with its improper use.
2. Use high lift vehicle stands in pairs on hard level surface capable of sustaining rated capacity loads. Use one pair per vehicle.
3. Insert roll pin into the bottom hole of the extension tube.

4. Load and stands must be stable before working on, around, or under load.
5. Inspect before use. Do not use if bent, broken, cracked, or otherwise damaged components are noted.
6. Consult vehicle manufacturers service manual for proper lifting and support locations.

## Operation TO SUPPORT

1. Adjust height by pulling up extension tube. Ensure stopper is positively engaged into extension tube. Place stands under support points.
2. Lower the load slowly onto the stands. Do not remove lifting device.

**IMPORTANT:** Stopper must be securely inserted.

## TO REMOVE

1. With suitable lifting device, raise vehicle clear of stands.
2. Release stopper and allow extension tube to glide down to lowest position.
3. Carefully remove stands, then slowly lower vehicle with lifting device.

## Maintenance and Storage

Periodically inspect product. Ensure all parts move freely. Do not apply oil or grease to this product. Wipe clean before use. Maintain labels and replace as needed, contact your local Grainger. Store stands in upright position and in a clean, dry area. Place stopper in stopper holder on base section.

**NOTE:** Other than Label and Manual, No replacement parts available for these units. Replace as a matched pair only.

# Westward® High Lift Vehicle Stands

## LIMITED WARRANTY

**WESTWARD ONE-YEAR LIMITED WARRANTY.** *High Lift Vehicle Stands*, covered in this manual, are warranted by Westward to the original user against defects in workmanship or materials under normal use for one year after date of purchase. For limited warranty claim procedures, see PROMPT DISPOSITION below. This limited warranty gives purchasers specific legal rights which vary from jurisdiction to jurisdiction.

**LIMITATION OF LIABILITY.** To the extent allowable under applicable law, Westward's liability for consequential and incidental damages is expressly disclaimed. Westward's liability in all events is limited to and shall not exceed the purchase price paid.

**WARRANTY DISCLAIMER.** Westward has made a diligent effort to provide product information and illustrate the products in this literature accurately; however, such information and illustrations are for the sole purpose of identification, and do not express or imply a warranty that the products are MERCHANTABLE, or FIT FOR A PARTICULAR PURPOSE, or that the products will necessarily conform to the illustrations or descriptions.

Except as provided below, no warranty or affirmation of fact, expressed or implied, other than as stated in the "LIMITED WARRANTY" above is made or authorized by Westward.

**PRODUCT SUITABILITY.** Many jurisdictions have codes and regulations governing sales, construction, installation, and/or use of products for certain purposes, which may vary from those in neighboring areas. While Westward attempts to assure that its products comply with such codes, it cannot guarantee compliance, and cannot be responsible for how the product is installed or used. Before purchase and use of a product, review the product applications, and all applicable national and local codes and regulations, and be sure that the product, installation, and use will comply with them.

Certain aspects of disclaimers are not applicable to consumer products; e.g., (a) some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you; (b) also, some jurisdictions do not allow a limitation on how long an implied warranty lasts, consequentially the above limitation may not apply to you; and (c) by law, during the period of this limited warranty, any implied warranties of implied merchantability or fitness for a particular purpose applicable to consumer products purchased by consumers, may not be excluded or otherwise disclaimed.

**PROMPT DISPOSITION.** Westward will make a good faith effort for prompt correction or other adjustment with respect to any product which proves to be defective within limited warranty. For any product believed to be defective within limited warranty, first write or call dealer from whom the product was purchased. Dealer will give additional directions. If unable to resolve satisfactorily, write to Westward at address below, giving dealer's name, address, date, and number of dealer's invoice, and describing the nature of the defect. Title and risk of loss pass to buyer on delivery to common carrier. If product was damaged in transit to you, file claim with carrier.

**Manufactured for Grainger International, 100 Grainger Pkwy., Lake Forest, Illinois 60045 U.S.A.**